

Installation Guide

安裝說明書


VEHICLE APPLICATIONS
適用車型

TOYOTA ALTIS / COROLLA 10th E140/E150 2006-2012
TOYOTA ALTIS / COROLLA 9th E120/E130 2000-2007
TOYOTA ALTIS / COROLLA 11th E170 2013-

PART NO. 7980

Contents 內含配件

1. Front sway bar 前防傾桿 28mm 1PCS
2. Stab. Bush 防傾桿橡皮 2PCS

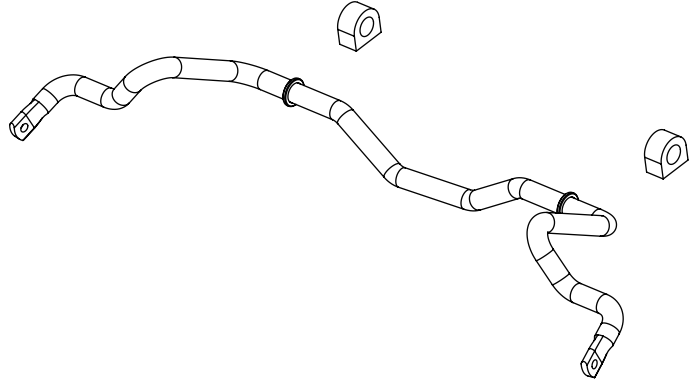


Installation tips 安裝方法



Removal of front sub-frame is suggested for easier installation.

建議拆卸前工字樑，更換前防傾桿

Torque for bracket C型固定座鎖緊扭力	60Nm
Torque for front sub-frame 工字樑鎖緊扭力	160Nm
Torque for engine mount 引擎腳鎖緊扭力	70Nm

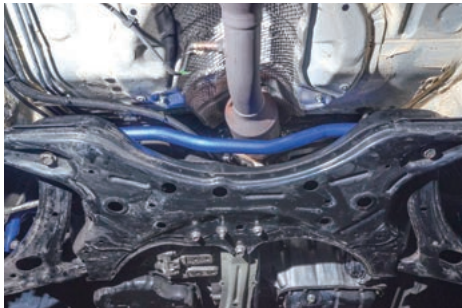

※ Alignment is required after installation.
安裝後務必完成電腦四輪定位校正

HARDRACE Tech Tips 技術提示

Warning! Risk of Death may be caused by vehicle slipping or toppling off the jacking platform.

警告! 在頂車機的作業下，車輛的滑動或倒塌可能會造成人員致命的危險

Motor vehicle mechanical knowledge is expected. In some country & states, fitment may only be legally performed by a licensed mechanic. Check the regulation in your area.

請預先了解車輛機械知識與檢察在您所屬的國家或區域地方是否需要專業技師執照才可執行更換安裝，以免觸法

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

