

Installation Guide

安裝說明書


VEHICLE APPLICATIONS
適用車型

FORD USA MUSTANG MK6 S550 2014-

PART NO. 8525

Contents 內含配件

1. Front Spacer 前墊片 (69x30.9x15) 1PCS
2. Front Spacer 前墊片 (69x30.9x14.2) 1PCS
3. Rear Spacer 後墊片 (72.2x28x14.2) 2PCS

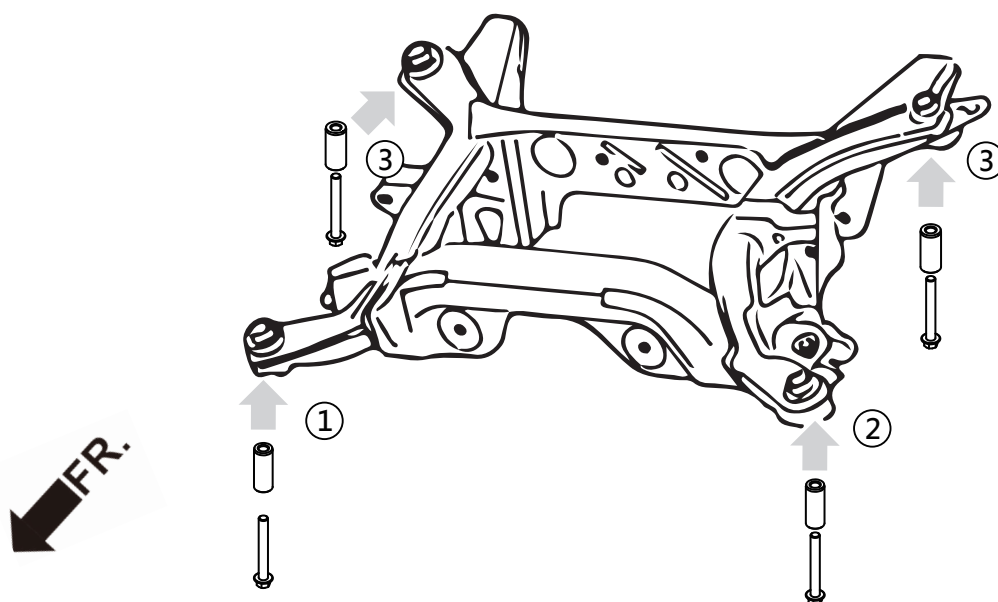

Installation tips 安裝方法

1. Install the rear spacer first, then install the front spacer.
建議先安裝後大樑後方鐵套位置·再安裝前方
2. Please install each spacer per labeled direction.
請依照箭頭標示安裝方向

