

# Installation Guide

## 安裝說明書

VEHICLE APPLICATIONS  
適用車型


SUBARU IMPREZA WRX/STI GE/GH/GR/GV 2007-2011  
SUBARU IMPREZA/XV GP/GJ 2012-2017  
SUBARU WRX/STI VA 2014-  
SUBARU FORESTER 3rd SH 2009-2013/ 4th SJ 2014-  
SUBARU LEGACY/OUTBACK BM/BR 2009-2013  
SUBARU LEVORG 2014 -

PART NO. 7669

### Contents 內含配件

※ Please apply hand tools for installation  
安裝過程請使用手動工具

1. Rear Sway Bar 22mm 後防傾桿 1PCS
2. Stabilizer Bush 防傾桿固定橡皮 2PCS

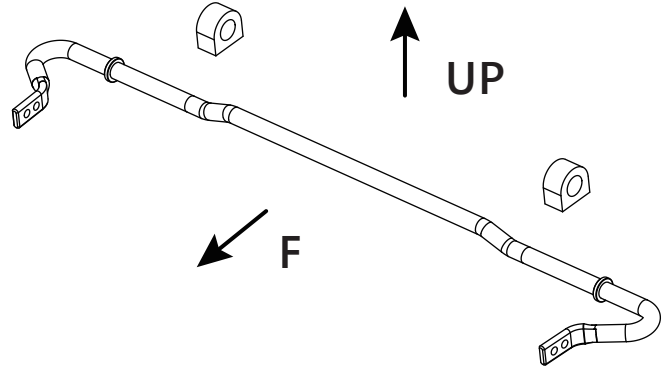

### Installation tips 安裝提示

※ Stabilizer bushings are Self-lubrication. Do not apply grease.  
HARDRACE 防傾桿專用橡皮已加入自潤功能，無須添加潤滑劑



Torque for bolts

螺絲鎖緊扭力：

M8-60Nm

M10-80Nm

Screw locking-glue is recommended

建議使用螺絲防鬆膠



### Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027  
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

