

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


FORD USA MUSTANG MK6 S550 2015-

PART NO. 8519

Contents 內含配件

※ Please apply hand tools for installation
安裝過程請使用手動工具

1. Front Sway Bar 36mm 前防傾桿 1PCS
2. Stabilizer Bush 防傾桿固定橡皮 2PCS
3. Bracket 防傾桿固定座 2PCS

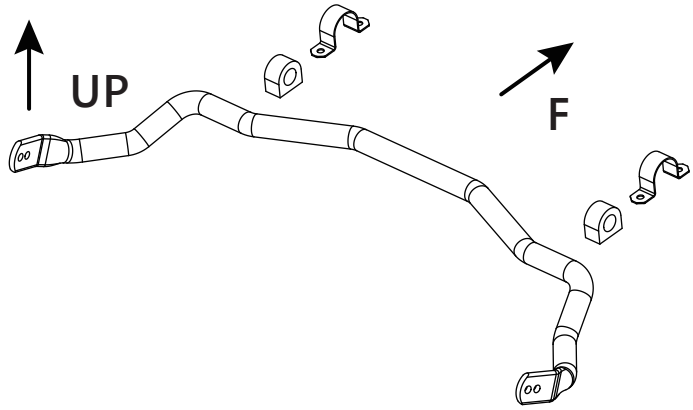

Installation tips 安裝提示

Removing/Installing sway bar from the left side is recommended.
防傾桿拆裝·建議由左側使用穿繞方式更換前防傾桿



Torque for bolts
螺絲鎖緊扭力：
M8-60Nm
M10-80Nm
M12-100Nm
M14-160Nm

Screw locking-glue is recommended
建議使用螺絲防鬆膠



Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行·以確保安裝過程的正確與安全

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時·請記下您的線組與管線安裝位置·非原廠相同的安裝位置可能會造成元件之損壞·造成車輛的危險·請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

