

Installation Instructions

安裝說明書

FRONT STRUT BRACE

引擎室拉桿


#8926

Application 適用車型

Volkswagen Golf MK7 '14-present

Components 內含配件

① Strut brace 引擎室拉桿	1PCS
Bolt 螺絲 (M10x1.5x60)	2PCS
Nut 螺帽 (M10x1.5-17x10)	2PCS
Washer 華司 (20.8x10.7x2)	4PCS

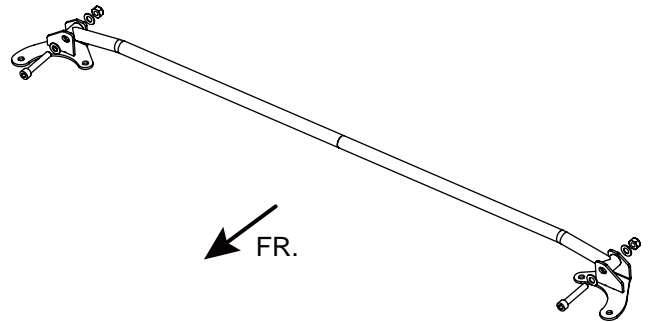

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the cowl panel to access the front strut towers.
拆卸兩刷蓋板後找到避震塔。
2. Remove the two rearmost bolts from the strut towers on both sides. (See figure 1)
拆卸兩側避震塔上靠後方的兩個螺絲 (請參考圖一)
3. Position the brackets of ① Strut Brace to the strut towers on both sides, then reinstall the removed bolts to secure the brackets.
將 ① 引擎室拉桿 兩側的支架安裝至兩側避震塔，並鎖回已拆下的螺絲以固定支架。
4. Install the cross bar to the brackets with supplied bolts, nuts and washers. (See components figure & figure 2)
使用配件中的螺絲、螺帽、華司安裝中間桿，使桿身固定於兩側支架。
5. Reinstall the cowl panel after installation.
完成後裝回兩刷蓋板。



Illustration of installed state
安裝完成示意圖